







Product Instructions MANABLOC® PEX Press Port Adapters (1/2" Ports)


THE WATER SUPPLY TO THE MANABLOC AND THE PORT VALVES SHALL BE TURNED OFF BEFORE ATTEMPTING INSTALLATION OF PRESS ADAPTERS.

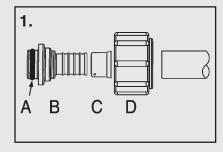

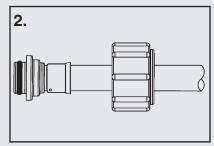

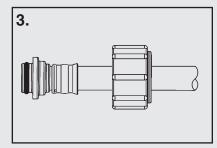

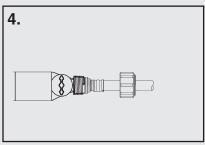

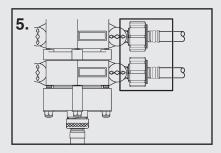



- 1. Slide the supplied swivel nut (D) and a press sleeve (C) 61000 for 3/8" tubing; 61020 for 1/2" onto the tubing (threads of the nut toward the end of the tubing).
- 2. Insert the barbed end of the fitting (B) fully into the end of the tubing as shown.
- **3.** Check full tubing insertion at view hole of sleeve, then press the sleeve with an appropriately sized press tool. <u>DO NOT PRESS TWICE.</u> Refer to opposite side of this instruction page for additional pressing information.
- **4.** Insuring o-ring (A) is in place, insert the fitting into the desired port until the fitting flange sets flush with the end of the port.
- 5. Slide the swivel nut (D) over the press sleeve (C) and thread the nut onto the MANABLOC port, hand tighten only. Open the port valve(s) before turning on the main water supply.